

STORING SYSTEM SPEED NUMBERS

System speed numbers must be entered by the first programmed attendant. In no attendant is specified, enter at Station 100.

- a. Press SPEED button twice
- b. Dial the System speed bin location (20 – 99)
- c. Dial the Telephone number to be stored
- d. Press the SPEED button.
- e. Hang up.